

Honey Bee Manufacturing Ltd. P.O. Box 120 Frontier, Sask. SON 0W0 Phone (306) 296-2297 Fax (306) 296-2165 email: <u>rick.norheim@honeybee.ca</u>

SERVICE BULLETIN



Ref: SRV - 016- 004

Date: Aug. 26, 2016


Product: Honey Bee AirFLEX tables model year 2014, 15 and 16

Re: Bearing clamp bolts

Problem: Std. torque on bearing clamp bolts is inadequate, bearing and flywheel assembly will slide and contact housing. The contact will cause <u>FIRE</u>.

Solution: Remove gr. 5 bolts and reinstall gr. 8 bolts, torque to 120ft.lb. (Note: If gr. 8 bolts are not available torque existing bolt to 120 ft.lb.).

Important: After torqueing bolts make certain flywheels are not making contact with any part of the housing as they rotate.

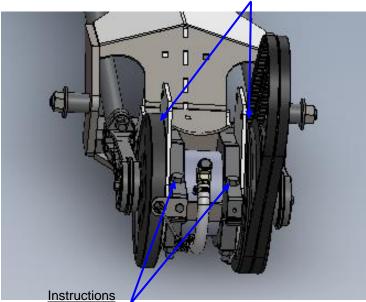

Remove the $2 - \frac{1}{2} \ge 5 \frac{1}{2}$ gr. 5 unc. bolts. Replace bolts with $2 - \frac{1}{2} \ge 5 \frac{1}{2}$ gr. 8 unc. Torque bolts to 120 ft.lb. Note: If gr. 8 bolts are not available torque existing bolt to 120 ft.lb.