


Honey Bee

New Holland Reel Height Controller Installation

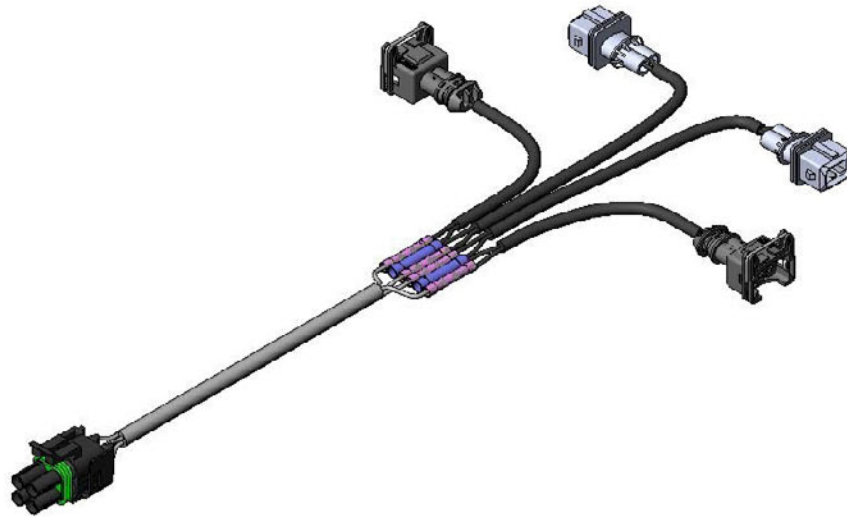


Preparation

Unpack the unit, and check the parts supplied against the packing list enclosed. Organize the components, and plan the best locations for the readout, control box, and wiring.

Parts

1. Wire Harness
2. Controller
3. Readout
4. Suction Arm
5. Interrupt Harness

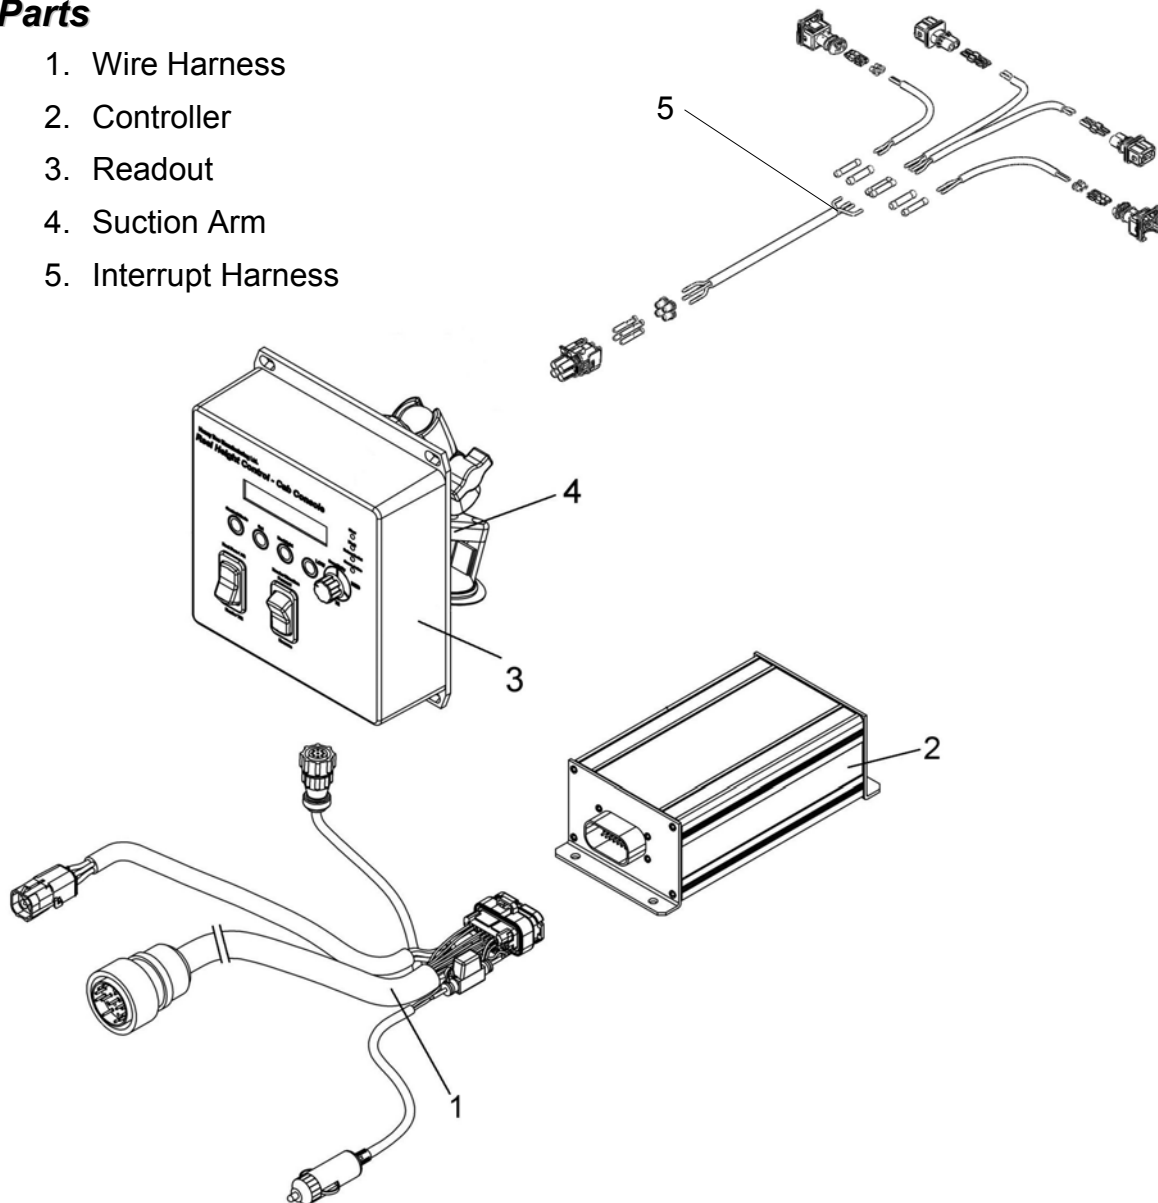



This Page Is Intentionally Left Blank

Assembly

1. Remove the safety panels from the left side of the feeder house to expose the main hydraulic control block.

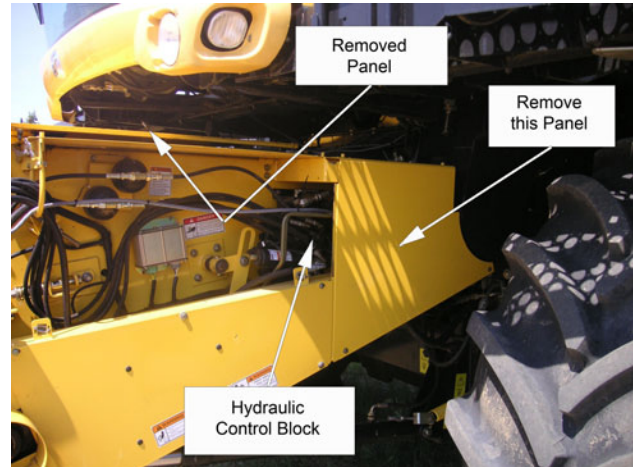


Illustration 1: Main Hydraulic Block Access Panels

2. This view shows the hydraulic block from the front of the feeder house, where you can clearly see the solenoids. The close-up taken in *Illustration 3: Locations of "Up" Control Wires* is taken from the side of the feeder house.



Illustration 2: Hydraulic Solenoids - Front View

3. Connect the plugs to the "Up" solenoid at the front of the hydraulic block. The "Up" wires of the interrupt harness are marked with white bands at the tops of the plugs.
4. Unplug the wiring harness from the solenoid shown in Illustration 2: Hydraulic Solenoids - Front View. Connect the white banded plug from the interrupt harness that fits this plug. Connect the remaining interrupt plug to the second solenoid up from the bottom of the block.

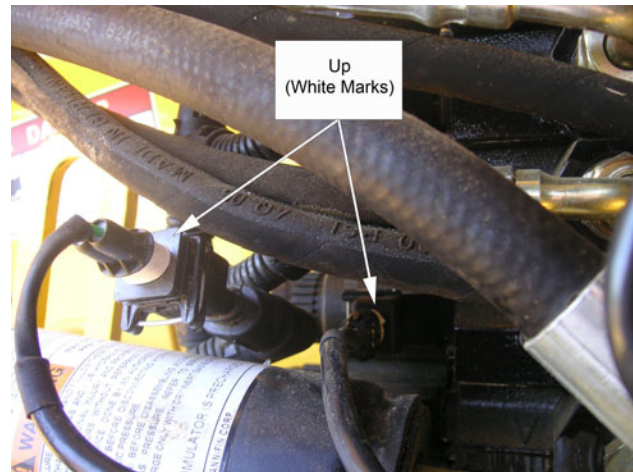


Illustration 3: Locations of "Up" Control Wires

5. The plugs will not fit in reverse. You must match the plug type to the socket for it to connect.
6. The "Down" solenoid is located at the back of the hydraulic block, as shown here.

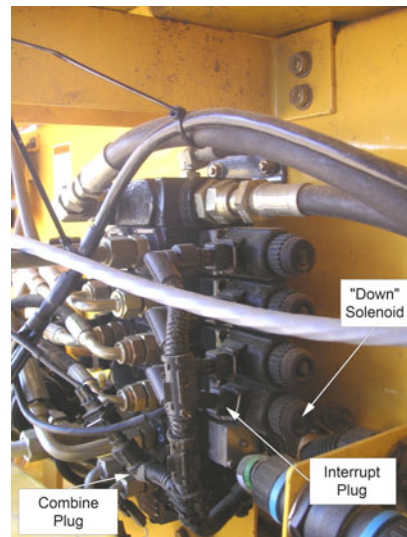


Illustration 4: Hydraulic Block - Rear View

7. Remove the plug from the solenoid shown in Illustration 4: Hydraulic Block - Rear View, and reconnect it to the interrupt harness plug. Connect the remaining plug from the interrupt harness to the bottom solenoid on the hydraulic control block.

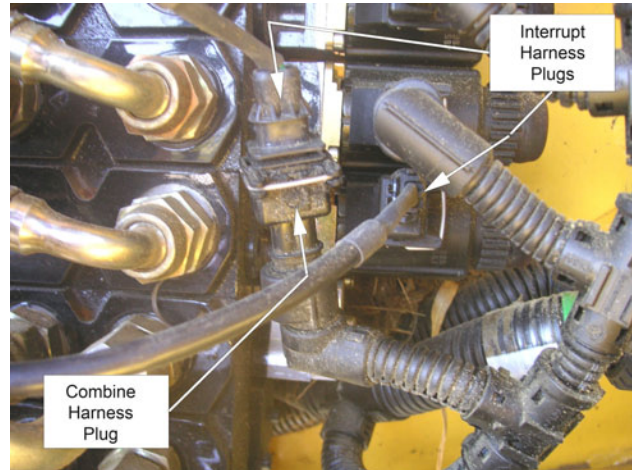


Illustration 5: Locations of "Down" Control Wires

8. Run the wire from the interrupt harness up into the cab of the combine, securing with zip-ties along the way. Ensure you run the wire in such a way that it does not come into contact with any moving parts or locations where it may become damaged.

NOTE: There is a plug in the floor which may be removed for wire routing into cab.

9. Mount the Readout and Controller in safe and clean locations in the cab. The readout comes with a suction cup mount for attaching to the windshield, moisture the suction cup to ensure a good hold.

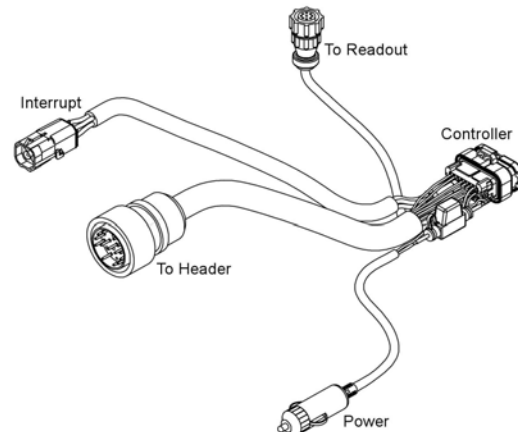


Illustration 6: Wire Harness

10. Connect the interrupt plug to the Wire Harness. Connect the wire harness to the controller, readout, 12v power plug, and to the multi coupler on the header.
11. The plugs are designed to fit in only one way, with some care in aligning them, they should connect easily, and snap, or lock into position with a slight turn. Take care to align the plugs correctly.



Illustration 7: Readout Connection



Illustration 8: Power Plug Location



Illustration 9: Controller Connection

12. Ensure that when you run the connector to the header, that you secure the wire in such a way that it does not come into contact with any moving parts.



Illustration 10: Interrupt Connection

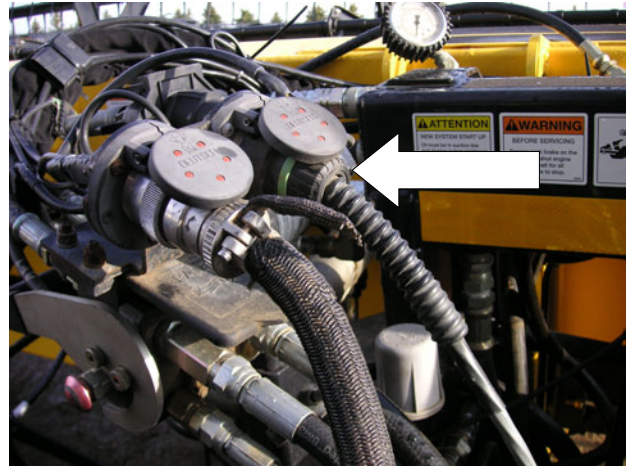


Illustration 11: Harness To Header Connection

Configuring Reel Height Control

After the interrupt harness, readout and controller are properly installed:

1. Start the combine and turn on the reel height controller.
2. The display on the readout should say “HoldAuto”. Press the “Control Mode” button so the display reads “Manual”.
3. Lift/Lower the table to regular cutting height, and lift the reel to your safety point (operating height).
4. Press and hold “Set” until “Set Point Stored” is displayed on the readout.
5. Press “Control Mode” once more so the display reverts back to “HoldAuto”
6. The light labeled “block” should be on at this time, raise the reel slightly and it will turn off.



The “block” light indicates that the auto reel height sensors are tripped.

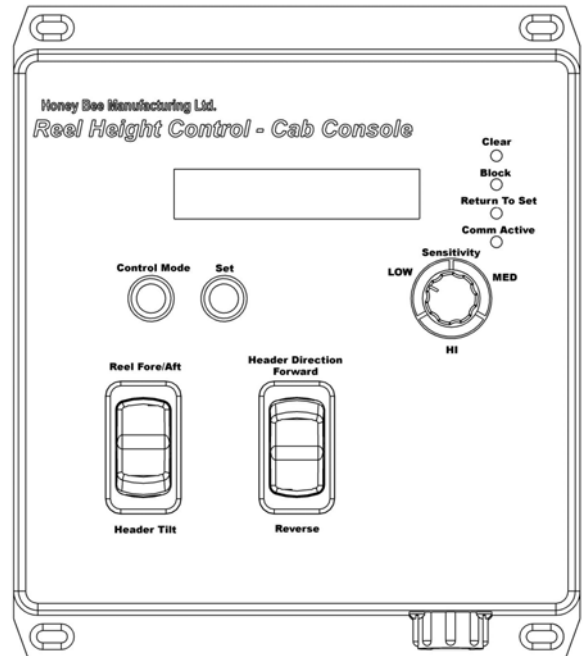


Illustration 12: Automatic Reel Height Control Readout

Operation

If the cutter bar lifts above the set height, the reel should automatically raise up to avoid touching the cutting system. **For this reason, the cutter bar must not be locked in a stationary position and must be 'floating' for the automatic reel height control to function.** The closer the reel is to the cutter bar, the higher the sensitivity should be set on the readout.

Note:

Always turn off the controller when the combine is not in use, as it will be using power from the battery even if the combine is turned off.


The Automatic Reel Height Control will not function until the knife drive is running at a minimum of 20 rpm. This is to ensure that it does not trigger when someone is working on the unit.

Testing

Start the unit, and calibrate the sensor as detailed in the Combine Operator's Manual. Test, and accustom yourself to, the operation of the controls.

Diagnostics

Refer to the following pin-out diagram for testing of specific circuits:

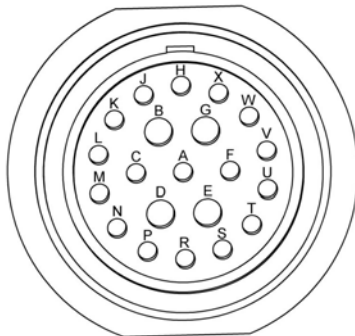

Electrical Plug Pin Layout
(Female End)

- A - Signal From LH Sensor (LH Green)
- C - Signal From RH Sensor (RH Green)
- P - Positive (White LH & RH)
- S - Negative (Black LH & RH)

NOTE: The Pin layout on the male plug is a mirror image of the female plug.

Illustration 13: Main Connector Pin Usage

Troubleshooting

Reel Not Moving Far Enough and/or Moving Too Far

If the reel is not moving far enough when the sensors are activated, loosen the adjuster bolt and slide the link arm along the central arm towards the front of the header. Then re-tighten the bolt. This will increase the motion of the reel.

If the reel is moving too far, then loosen the adjuster bolt, slide the link arm back towards the rear of the header and re-tighten the bolt. This will decrease the motion of the reel.

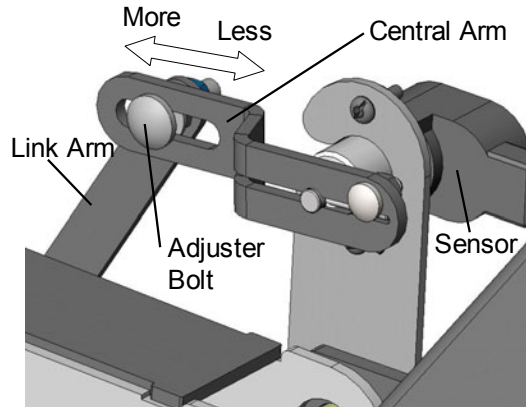


Illustration 14: Reel Arm Sensor

Reel Will Not Raise and/or Lower

Examining the Readout & Electrical Connections

The first thing you should troubleshoot is the electrical connections. The easiest way to do this is to monitor the Reel Height Control Readout.

When the **Reel Raise** controls are activated you should see the **up arrow** (▲) displayed for both the input and the output.

When the **Reel Lower** controls are activated you should see the **down arrow** (▼) displayed for both the input and the output.

If the arrows do not match, or if only one arrow is shown then there is a problem with the electrical connections. Inspect all electrical connections to ensure they are properly installed. Refer to *Illustration 10: Interrupt Connection* if necessary.

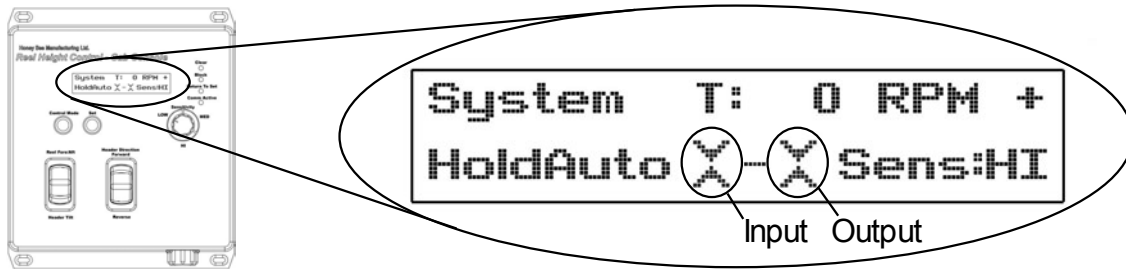


Illustration 15: Readout Input and Output Locations

Adjusting the Springs and Sensor Rollers

1. Ensure that the automatic reel height control sensor rollers are lightly pressing down on the cover plates on the cutter bar.
2. If the rollers are not touching the cover plates, remove the feather plates, keeping track of the nuts, bolts and washers.
3. Check and make sure that the springs on the Sensor Roller Assembly are properly oriented, so that they are causing the sensor rollers to press down on the cutter bar.

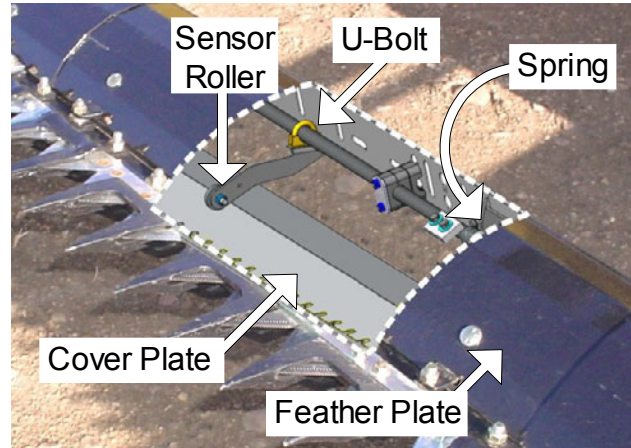


Illustration 16: Auto Reel Height Sensor Roller

4. If the spring is properly oriented, but the rollers are still not in the correct position, loosen the U-bolt holding each roller in place and reposition so they are touching the cover plates. Re-tighten the the U-bolt.